


MODEL C EXTENSIONS FOR ADVANCE & COBRA 2 SPRAY GUNS

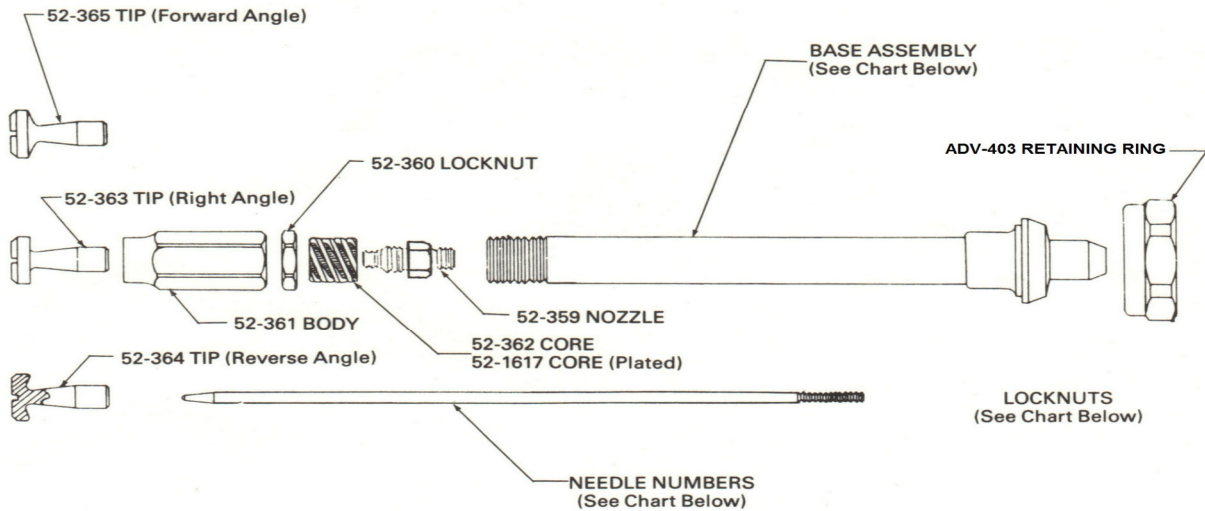

NEEDLE LENGTH (INCHES)	BASE ASSEMBLY NUMBER	NEEDLE PART NUMBERS		ASSEMBLY NUMBERS	
		NEEDLE ADVANCE C	NEEDLE COBRA 2 C	ADVANCE C EXTENSION	COBRA 2 C EXTENSION
6	ADV52-368	ADV52-30	COB52-30	EXT-ADV-C-06	EXT-COB-C-06
9	ADV52-369	ADV52-31	COB52-31	EXT-ADV-C-09	EXT-COB-C-09
12	ADV52-370	ADV52-32	COB52-32	EXT-ADV-C-12	EXT-COB-C-12
15	ADV52-371	ADV52-33	COB52-33	EXT-ADV-C-15	EXT-COB-C-15
18	ADV52-372	ADV52-34	COB52-34	EXT-ADV-C-18	EXT-COB-C-18
24	ADV52-373	ADV52-35	COB52-35	EXT-ADV-C-24	EXT-COB-C-24
30	ADV52-374	ADV52-36	COB52-36	EXT-ADV-C-30	EXT-COB-C-30
36	ADV52-375	ADV52-37	COB52-37	EXT-ADV-C-36	EXT-COB-C-36
48	ADV52-376	ADV52-38	COB52-38	EXT-ADV-C-48	EXT-COB-C-48
60	ADV52-377	ADV52-39	COB52-39	EXT-ADV-C-60	EXT-COB-C-60
72	ADV52-378	ADV52-40	COB52-40	EXT-ADV-C-72	EXT-COB-C-72
84	ADV52-379	ADV52-41	COB52-41	EXT-ADV-C-84	EXT-COB-C-84

Installation Instructions for Model C Extensions

- 1) Remove SP-626 (Advance Gun) or SPA-27 (Cobra 2 Gun) separator.
- 2) Place the spray gun in a vice and attach the extension securely with a wrench. Tighten the ADV-403 retaining ring by hand.
- 3) Insert needle into the back of spray gun.

